





## DWA-H Series Daylight Saving Time Instructions

---





### TO SET THE CURRENT TIME

The clock defaults to 12 midnight.

1. Press 
3. Press  or  To advance or reverse numerals on Hr:Min face until correct time is shown. Minutes are advanced or reversed first, followed by the hour.
5. Press  The time is now set.

### TO SET THE CURRENT DAY

The clock defaults to Sunday.

1. Press 
3. Press , , ETC. Corresponding light over chosen day will illuminate
5. Press  The day is set.